10LU troubleshooting Optimus / *Velara* rotor control

1) Check whether the supply from the EZ backplane or from the *Cube* is present:

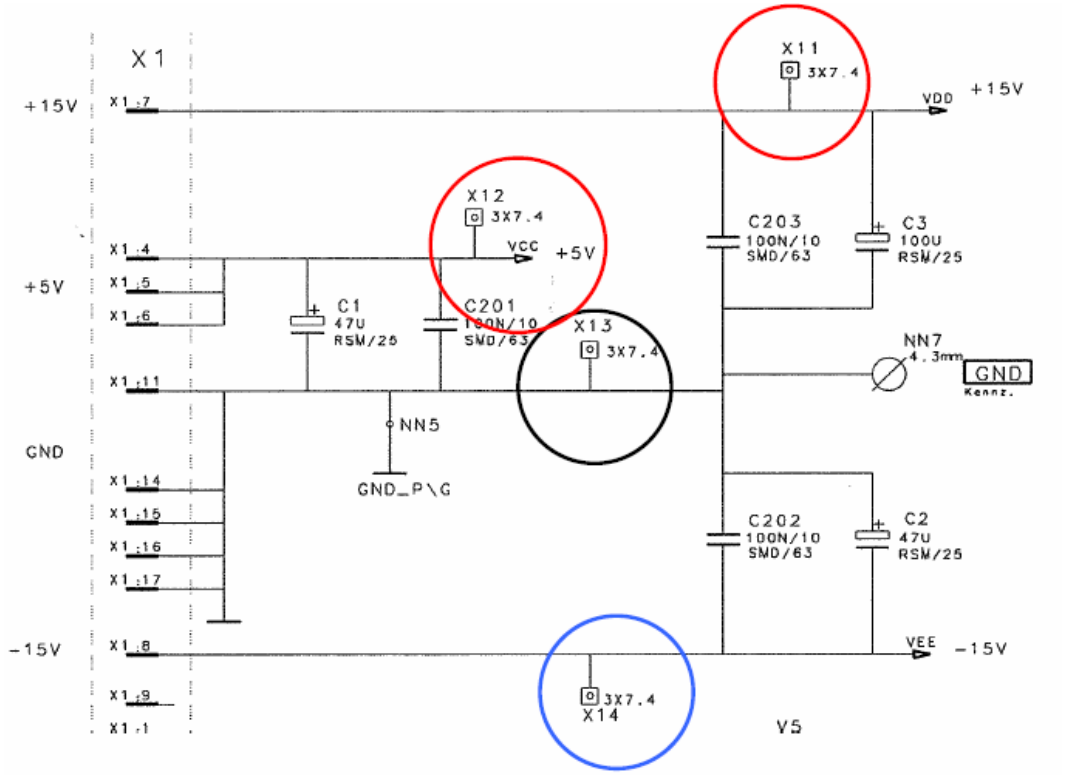

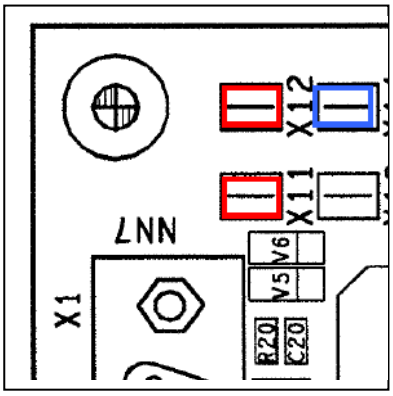

2) Check whether the voltage divider resistors are ok:

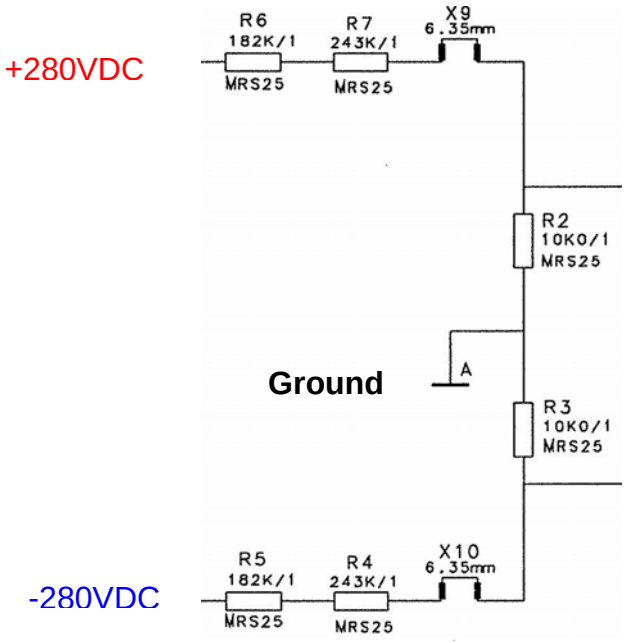

Location of resistors on Y100 PCB: